

Telis Hand-Held Remote

Features


UP Button

The "my" button acts as a stop button when the window covering is in motion. When the window covering is stationary, the "my" button brings it to the programmed favorite position.

DOWN Button

Channel LED
All 4 lights will illuminate when fifth channel is activated.

Channel Selector Button

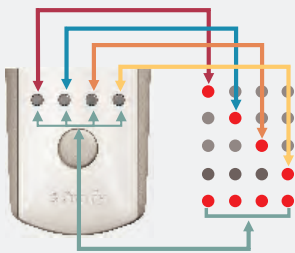

Telis 4 RTS
Hand-Held Remote
shown in Pure finish
Telis 1 RTS also available

Programming
Button
(recessed)



Back view of Remote

Also available in multiple finishes:



Silver




Lounge



Patio


DecoFlex Wireless Wall Switch

Features

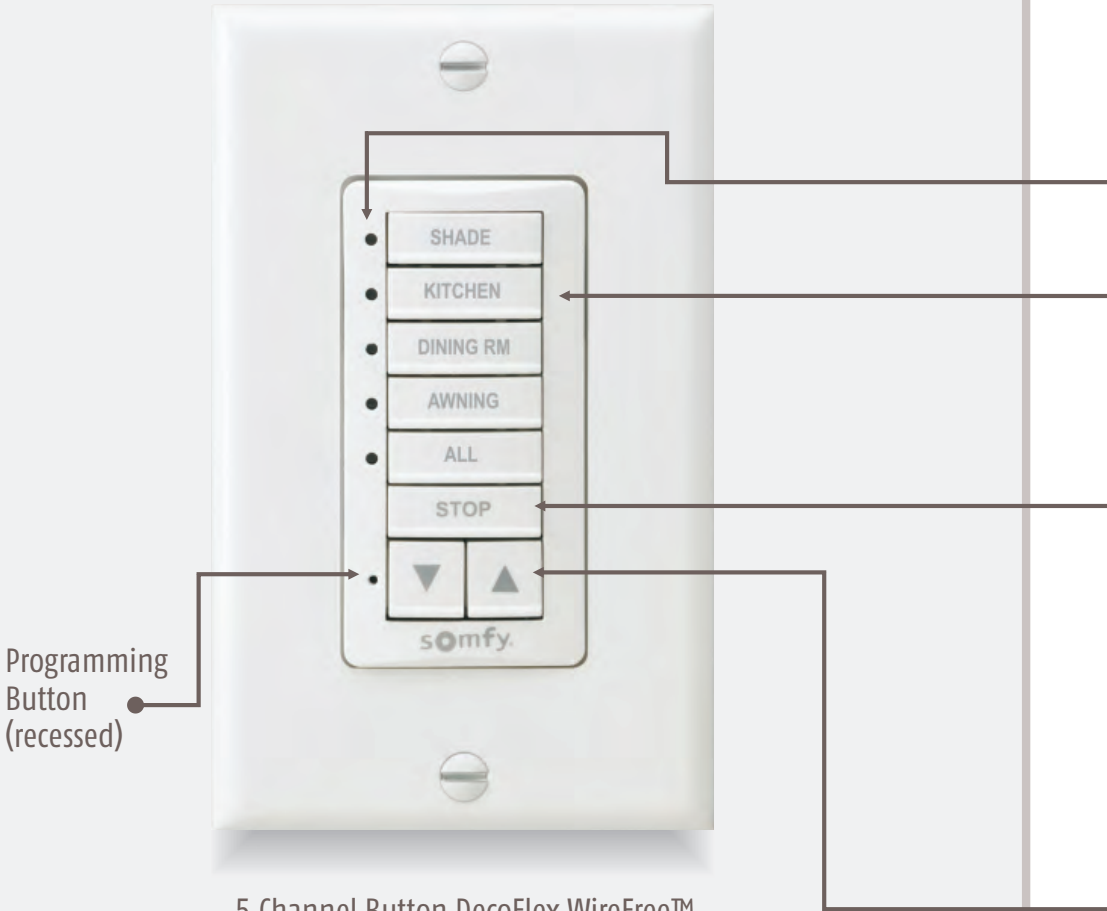


5 Channel Button DecoFlex WireFree™
RTS Wall Switch shown in White Finish

 Also available in multiple finishes and various channel button versions:



Ivory

 

Black

For a complete list of available pre-printed buttons please go to www.somfy.com and search for "buttons".

QUICK PROGRAMMING GUIDE FOR THE FOLLOWING RTS MOTORS

- CT32 CORD LIFT WIREFREE
- LT30 ROLL UP WIREFREE
- ST30 SONESSE 30
- ST40 SONESSE 40
- ALTUS 40
- ST50 SONESSE 50
- ALTUS 50
- ALTUS 60

FACTORY MODE



BEFORE YOU BEGIN

Motors are shipped in FACTORY MODE without limit settings and transmitter Id's. Power must ONLY be connected to current window covering being programmed. All other window coverings must be disconnected from their respective power while programming.



Note - If motor is 120V AC hardwired and cannot be disconnected, please contact an electrician prior to calling Somfy customer service for assistance.

Connect Power To Motor

With the motor installed in window covering, connect power to the motor (120V AC, or 12V DC or 24V DC transformer or 12V battery wand).





PROGRAMMING MODE



While programming, window covering should not be inactive for longer than 2 minutes or motor will exit PROGRAMMING MODE.



Initiate Programming

On the transmitter, press and hold both the UP  and DOWN  simultaneously until the window covering jogs. A jog is a brief up and down or in and out motion. In PROGRAMMING MODE, the window covering will move only when the  UP or DOWN  is held (or momentary fashion).

QUICK PROGRAMMING GUIDE FOR RTS MOTORS

Check the Direction of operation



If hand-held transmitter direction **is not properly programmed**, Eolis/Soliris RTS sensor **will not function** in the manner it was intended. Damage to motorized window covering and injury may occur as a result.

During installation, it is mandatory to test and verify the motorized window covering operates in accordance to the commands from hand-held transmitter.

Installer or user must verify the following Hand-Held transmitter (DOWN) command:

Awning Installations: ▼ = awning moves outward or extends.

Shade/Shutter Installations: ▼ = shade/shutter moves downward or closes.

Check Directions



Press and hold UP ▲ or DOWN ▼. When pressing DOWN ▼ product should go down or out. If window covering does not correspond with UP ▲ or DOWN ▼ you must REVERSE the output direction. To reverse output direction, simply press & hold the my (STOP) until the window covering jogs. Output direction should now correspond.

Setting Limits

Set the Upper Limit



STEP 1: Bring the window covering to desired UPPER limit stop point with the UP ▲ button. Press and hold both my (STOP) and DOWN ▼ simultaneously until the application starts to move, then release. If the window covering stops when the buttons are released, take it back to the UPPER limit and repeat. Stop the motor when reaching the desired LOWER limit. You can adjust by pressing UP ▲ or DOWN ▼ after stopping the motor.

Set the Lower Limit



STEP 2: Press and hold both my (STOP) and UP ▲ simultaneously until the application starts to move, then release. The window covering will stop at the UPPER limit that was previously set.



In case of problems with setting of limits during PROGRAMMING MODE, turn the power off to the motor for 2 seconds and then back on to reset the motor. Please return to **PROGRAMMING MODE** to initiate programming process.



Confirm Limit Settings

STEP 3: Press and hold my (STOP) until the window covering jogs to confirm the limit settings. A jog is a brief up and down motion.

QUICK PROGRAMMING GUIDE FOR RTS MOTORS

Programming Completed



Step 4: Press and hold the PROGRAMMING BUTTON on the back of the transmitter until the window covering jogs. The window covering is now in **USER MODE**. In USER MODE, the window covering will operate with a brief PRESS on UP  or DOWN  (or maintained fashion).

USER MODE

Adjusting the Limits in User Mode

To Change the Lower Limit:

STEP 1: Press DOWN  to send the window covering to it's current LOWER Limit.



STEP 2: Press and hold both UP  and DOWN  simultaneously until the window covering jogs. Adjust to a new LOWER limit position.

STEP 3: Press and hold  (STOP) until the window covering jogs, to confirm new limit.

To Change the Upper Limit:

STEP 1: Press UP  to send the window covering to it's current UPPER Limit.



STEP 2: Press and hold both UP  and DOWN  simultaneously until the window covering jogs. Adjust to a new UPPER limit position.


STEP 3: Press and hold  (STOP) until the window covering jogs, to confirm new limit.

Setting Intermediate Preferred "MY" Position




Press the  or  to operate window covering. At the desired intermediate "MY" position press  (STOP) briefly to stop the window covering.



Once the desired "MY" position is reached, press and hold  (STOP) until the window covering jogs. The "MY" position is now added to memory.

QUICK PROGRAMMING GUIDE FOR RTS MOTORS

Send the window covering to the "MY" position by pressing  (STOP) from ANY window covering position.



Window covering should be stationary prior to activating "MY" position function. If window covering is actively moving (in-motion)  (STOP) should be pressed twice.

Adding or Deleting a Transmitter

(Single Channel, Multi Channel, or Sensor)



Programmed Transmitter

STEP 1: Using an already programmed transmitter, select the transmitter (single channel) or the channel (1-5 of a multi-channel transmitter, or the sensor). **Step 1 should not be performed with the transmitter intended for deletion.**

STEP 2: Press and hold the PROGRAMMING BUTTON of that transmitter until the window covering jogs.



Transmitter to Add or Delete

STEP 1: Select the transmitter (single channel) or the channel, (1-5 of a multi-channel transmitter, or the sensor) to be added or deleted.

STEP 2: Press and hold the PROGRAMMING BUTTON of that transmitter until the window covering jogs.




Deleting "MY" Position

Activate window covering to intermediate position, then press and hold  (STOP) for 5 seconds. Window covering will jog to confirming deletion of "my" position.

QUICK PROGRAMMING GUIDE FOR RTS MOTORS

Resetting All Pre-Programmed Limit Settings & Channels

LT30 WIREFREE™ ROLL UP MOTORS LT-30 RTS 12V DC

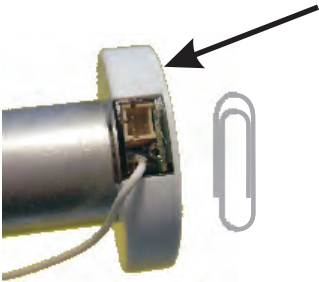

Using a paper clip, press and hold the PROGRAM BUTTON located on the motor head until window covering jogs 3 times, then release button. All transmitters and limits will be erased (motor is now reset to **FACTORY MODE**). Motor limits will need to be reestablished. **Please return back to PROGRAMMING MODE to initiate programming process.**

ST30 Sonesse™ 30 24V DC



Using a paperclip, press and hold the red PROGRAM BUTTON (approximately 15 seconds) until the window covering jogs 3 times. All transmitters and limits will be erased (motor is now reset to **FACTORY MODE**). Motor limits will need to be reestablished. **Please return back to PROGRAMMING MODE to initiate programming process.**

CT32 Cord Lift WireFree™ RTS Motors



(Does not apply to Part #1000494)

Using a paperclip, press and hold the PROGRAM BUTTON, located on the top of the motor casing until window covering jogs 3 times, then release button. All transmitters and limits will be erased (motor is now reset to **FACTORY MODE**.) Motor limits will need to be reestablished. **Please return back to PROGRAMMING MODE to initiate programming process.**

QUICK PROGRAMMING GUIDE FOR RTS MOTORS

Resetting Altus RTS 120 V AC

Perform a Dual Power Cut to delete all previous settings and return motor to **FACTORY MODE**.



Remove plug from power for **2 Seconds**



Plug-in power cord for **10 Seconds**



Remove plug from power for **2 Seconds**



Plug-in power cord. Window covering will begin to move.

When the window covering stops, press and hold the **PROGRAMMING BUTTON** of any transmitter until the window covering jogs **twice**. Do not release the **PROGRAMMING BUTTON** until the jogging is complete or you will have to start the dual power cut from the beginning.

