



Roman Shade Instructions

Congratulations on your purchase of a specialty shade from DEL Motorized Solutions.
If you have any questions, please call technical support at 1-866-446-6867
or email us at info@motorizedsolutions.com

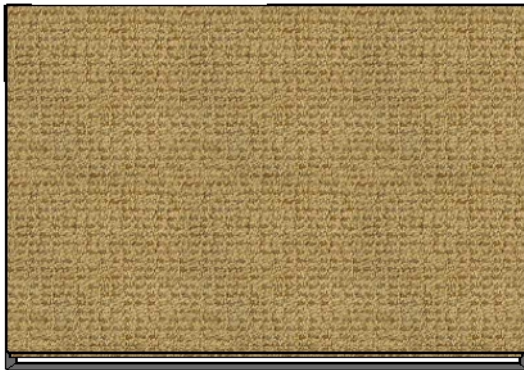

Important Notes - Please Read Before Installing

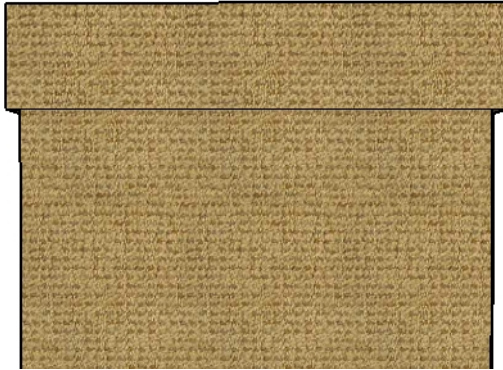


CAUTION: RISK OF FALLING OBJECTS

Securely install the shade system per the mounting instructions. Failure to do so could result in minor or moderate injury.



WARNING: SHOCK HAZARD

Can cause serious injury or death. Turn off power at the main service panel before connecting or servicing a shade with a wired power supply.

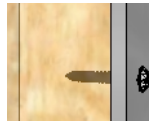

Shade brackets and hardware are to be anchored into wood blocking. If wood blocking is not available, you must use appropriate fasteners (not included) to support the weight of the system and load.



Pre-drill all holes with the appropriate size bit.

TOOLS REQUIRED

Pencil, Tape Measure, Powered Screwdriver / Drill, Level, 1/4 hex head driver, wire cutter/stripper, drill bits, steamer

Roman shade fabrics are susceptible to wrinkling during shipment and installation. It is common for the shades to require steaming after they have been installed. Great care should be taken while steaming to avoid shrinkage, water stains, burn marks, and other damage to the fabric.


TRIATHLON ROMAN WARNING



Assembly Locking
**DO NOT TRANSPORT
THE SHADE WITHOUT
LOCK ENGAGED**



Spring Lock
**DO NOT REMOVE
A SPRING WITHOUT
LOCK ENGAGED**

Outside Mount Roman Shades

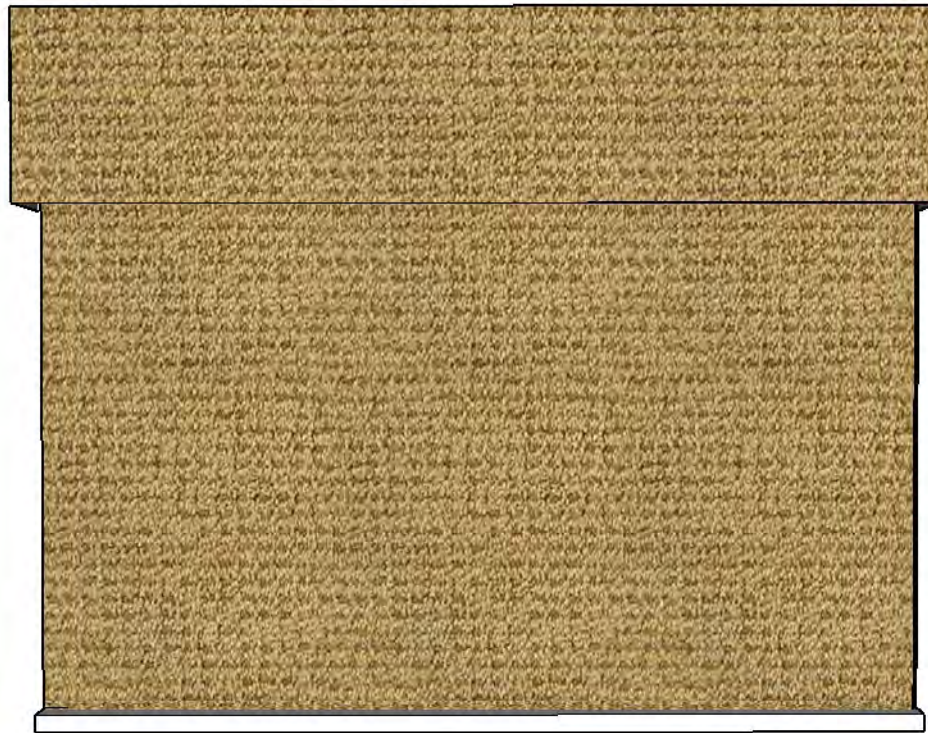

Step 1. Strike a level line.

Step 2. Install "L" brackets into solid blocking using 2" screws. The end brackets are to be placed at a location to clear the end tape reels (approximately 3 1/2" from each end). Install intermediate brackets at approximately every 24".

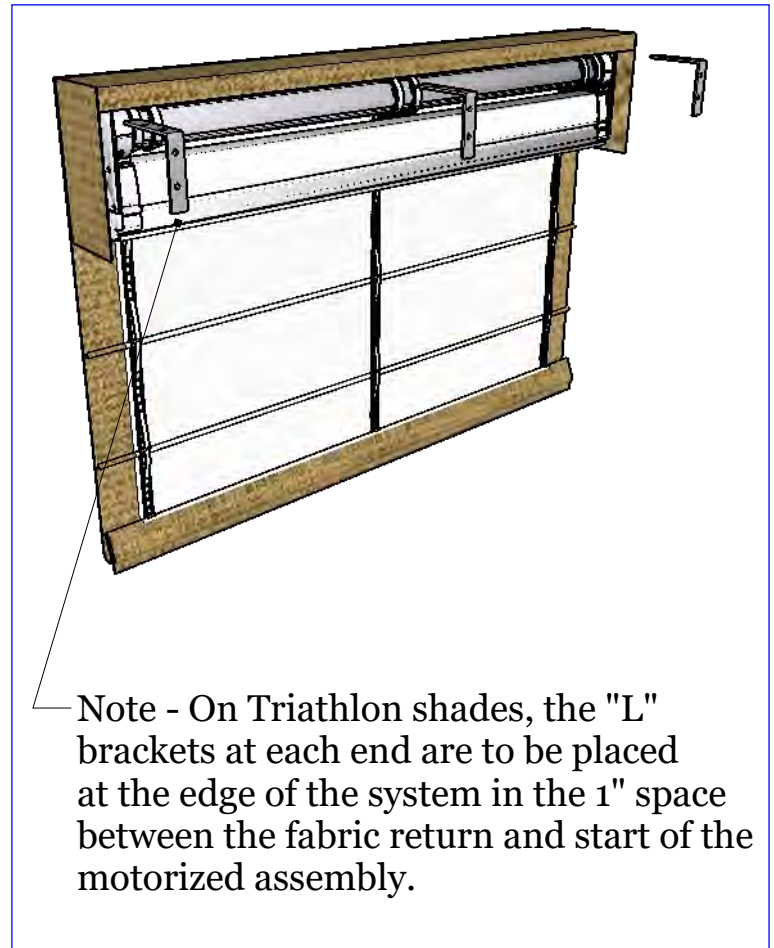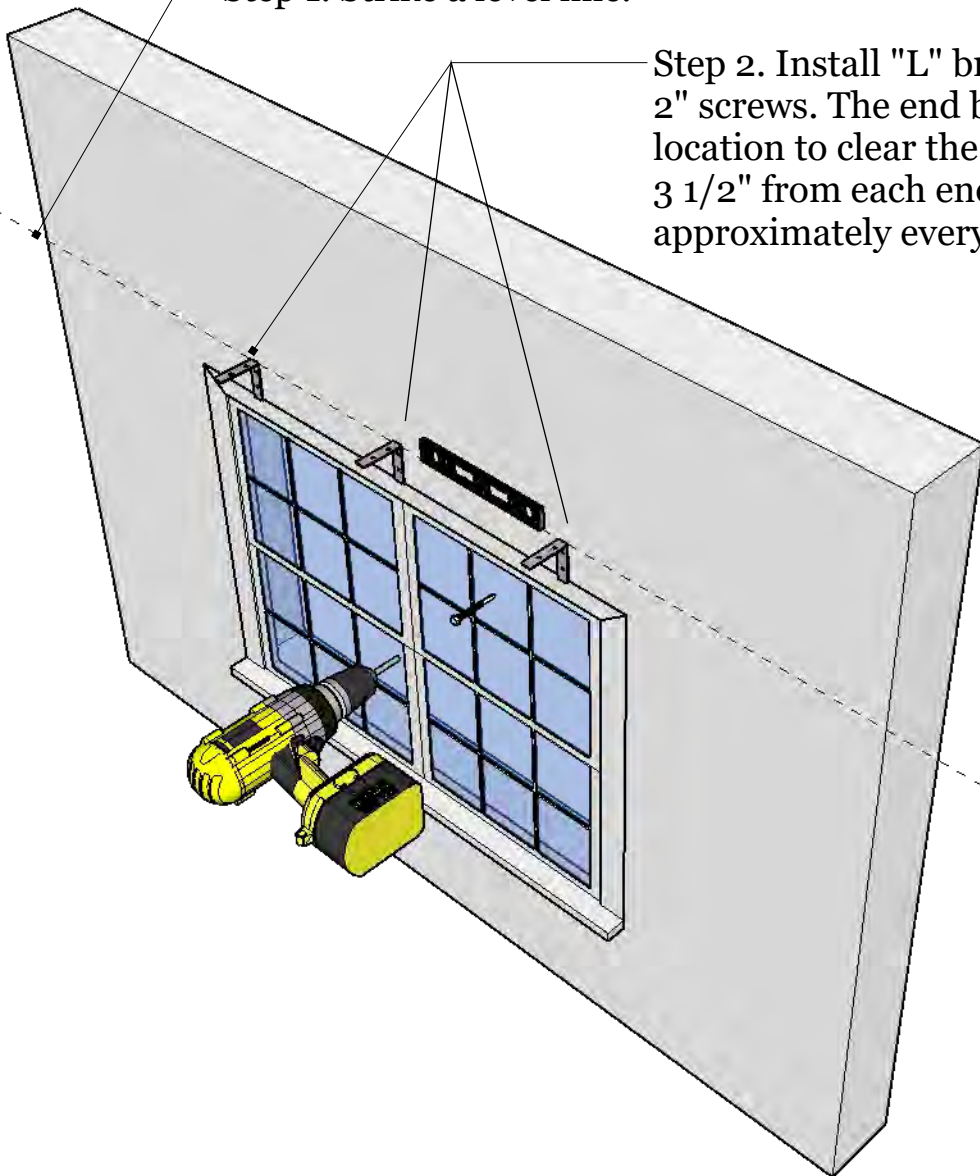


Note - On Triathlon shades, the "L" brackets at each end are to be placed at the edge of the system in the 1" space between the fabric return and start of the motorized assembly.


Step 3A. Slide the Roman shade over the brackets.
Note - To protect the fabric, the shade should be installed while it is in the raised position.

Step 4A. Install 3/4" screws through the "L" brackets and into the mounting board.

**Note - For Triathlon systems, the intermediate brackets are used to support the shade weight. You will not have space to install the 3/4" screws in the mounting board at the intermediate brackets.*

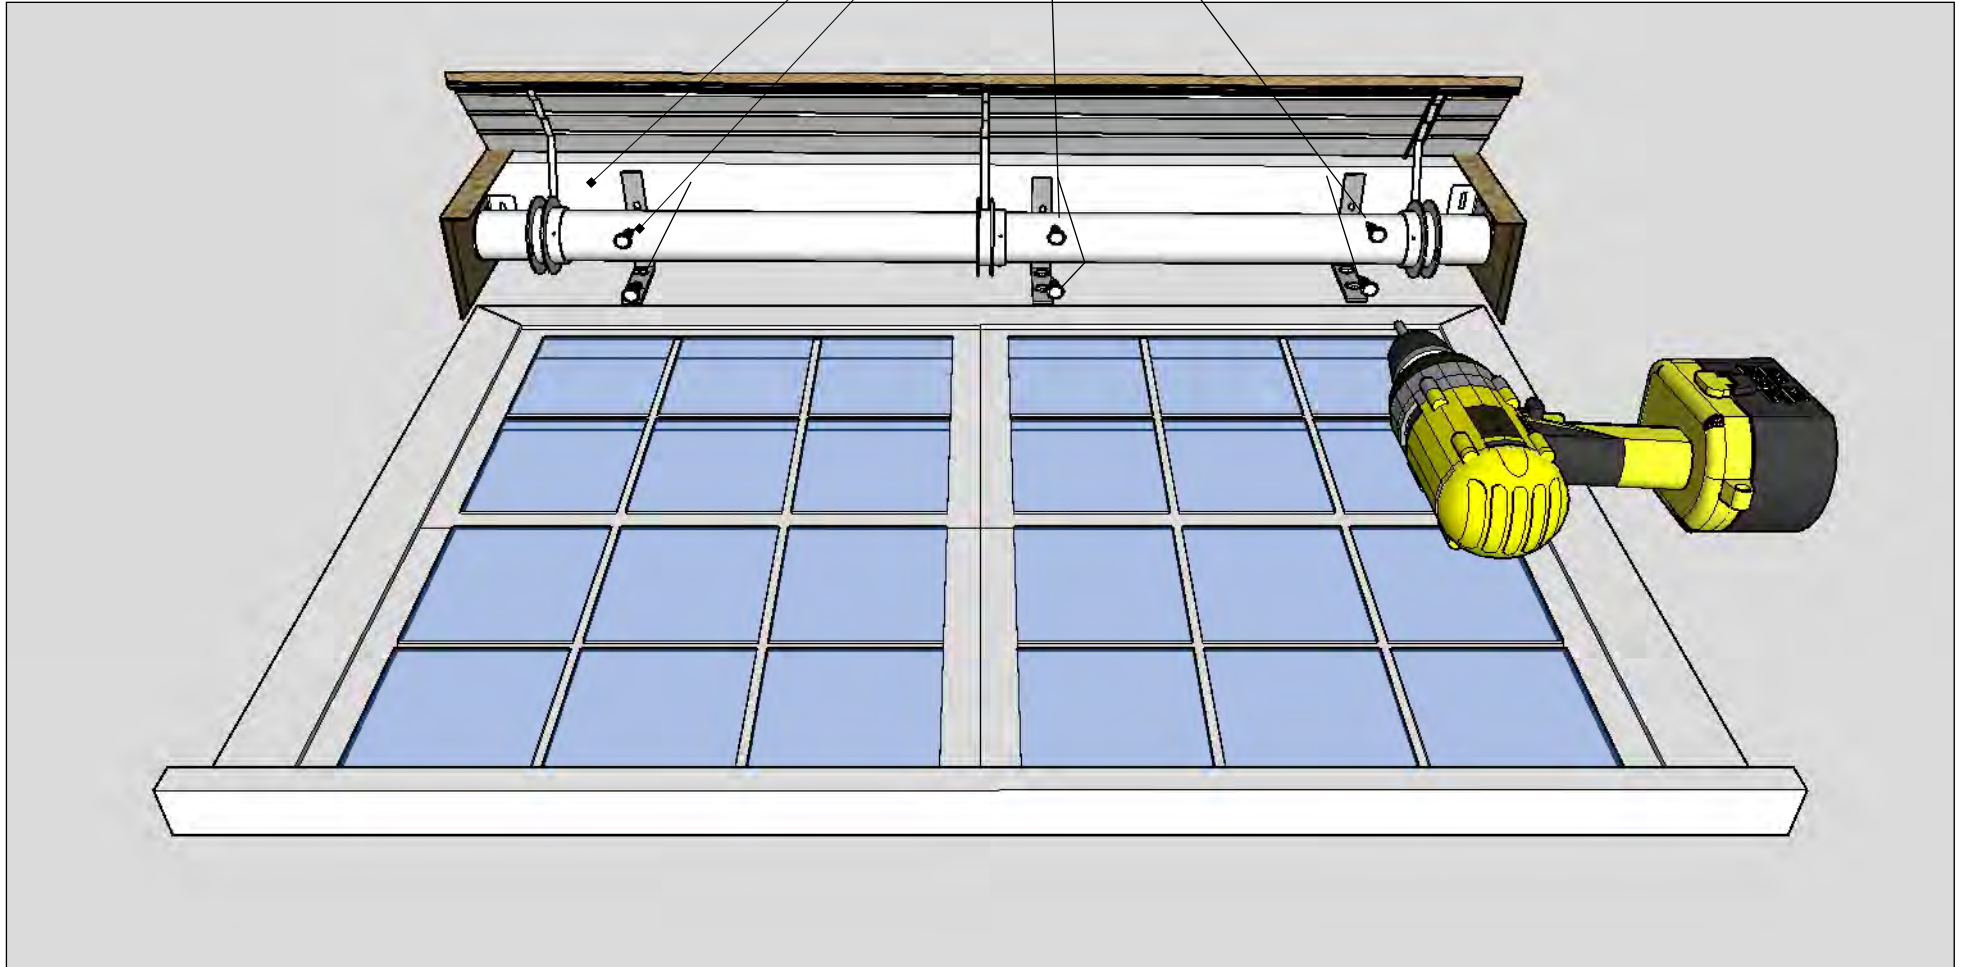

Fabric Front Shade

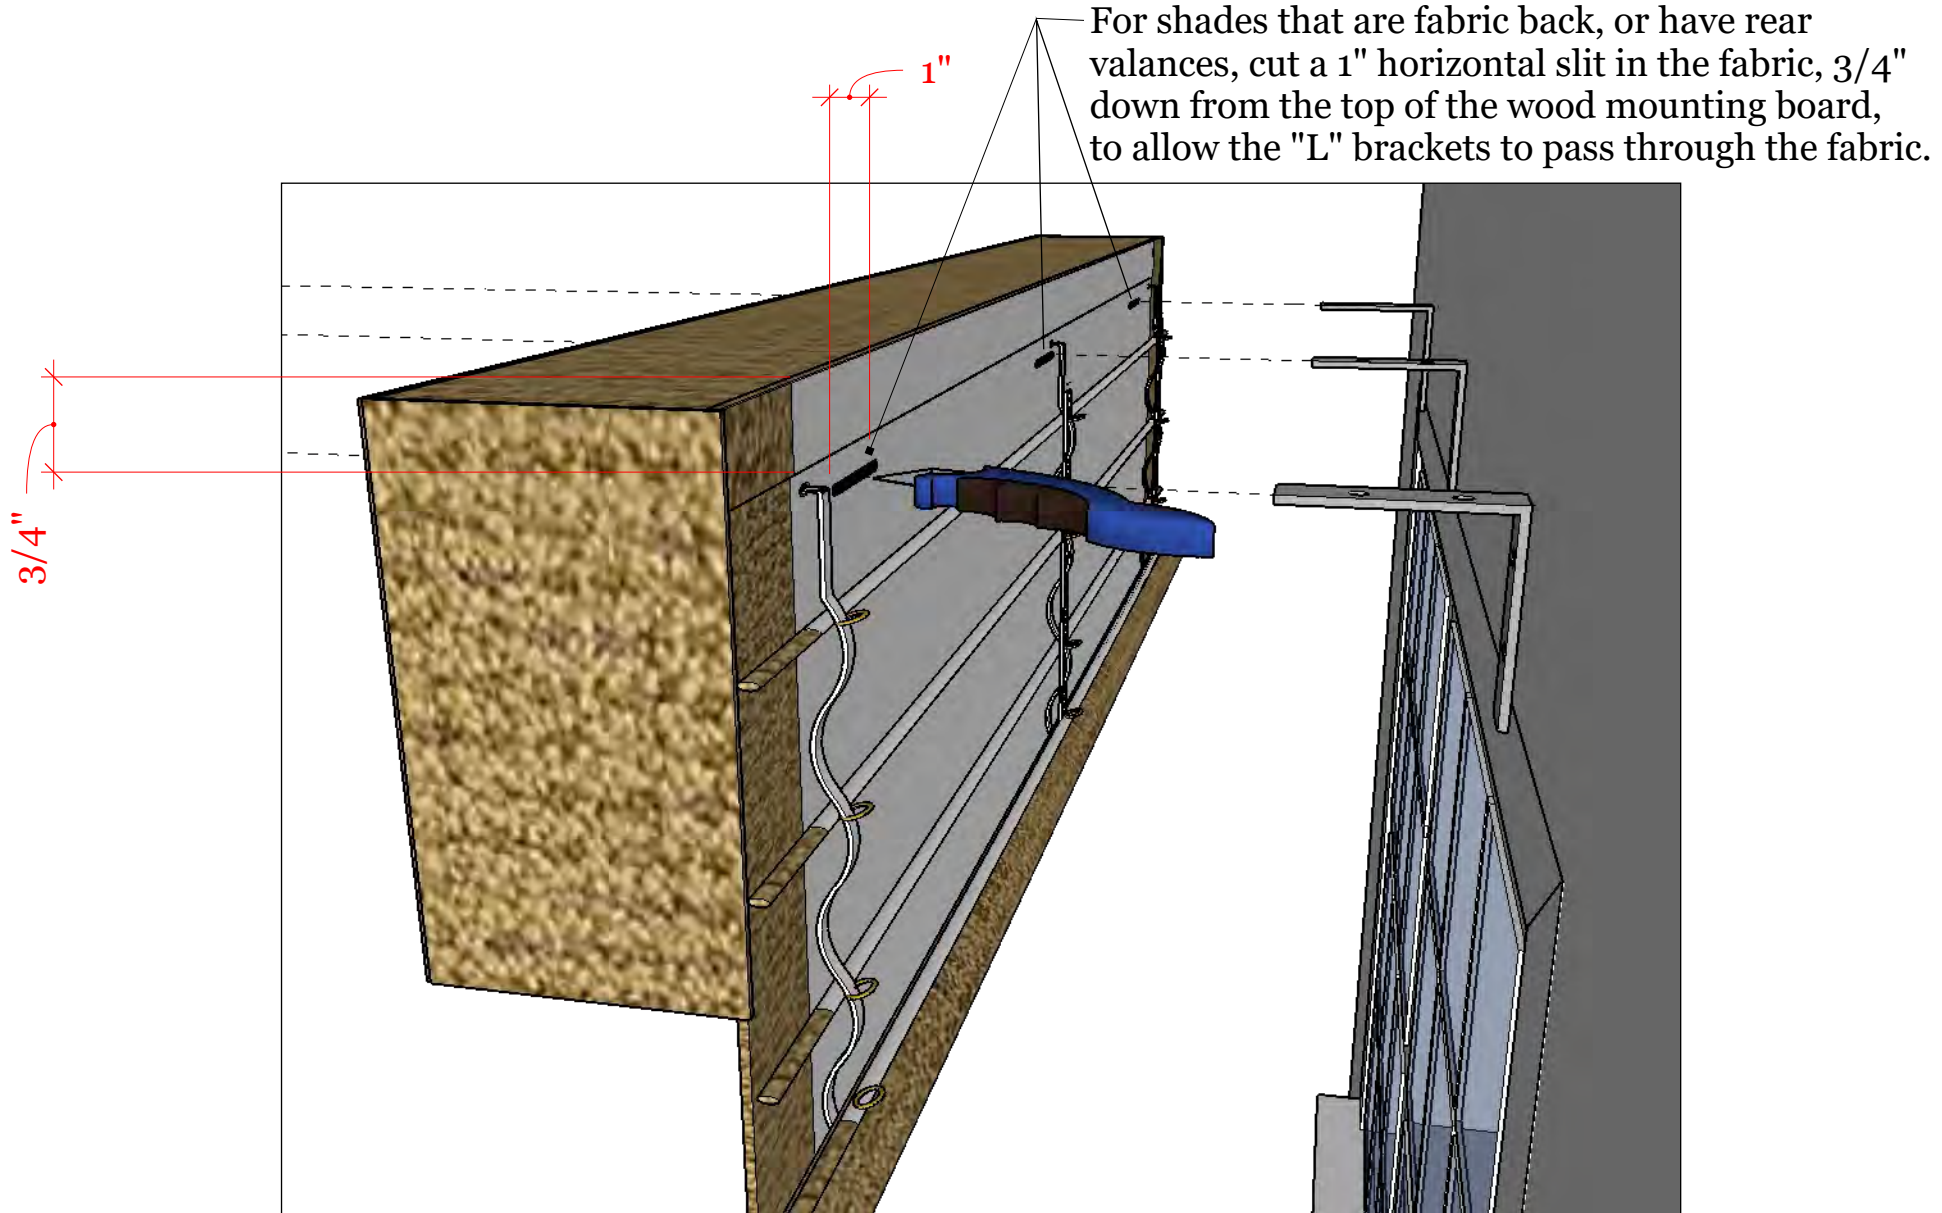


Fabric Back Shade

Step 3B. Slide the Roman shade over the brackets.
Note - To protect the fabric, the shade should be installed while it is in the raised position.


Step 4B. Install 3/4" screws through the "L" brackets and into the mounting board.

**Note - For Triathlon systems, the intermediate brackets are used to support the shade weight. You will not have space to install the 3/4" screws in the mounting board at the intermediate brackets.*

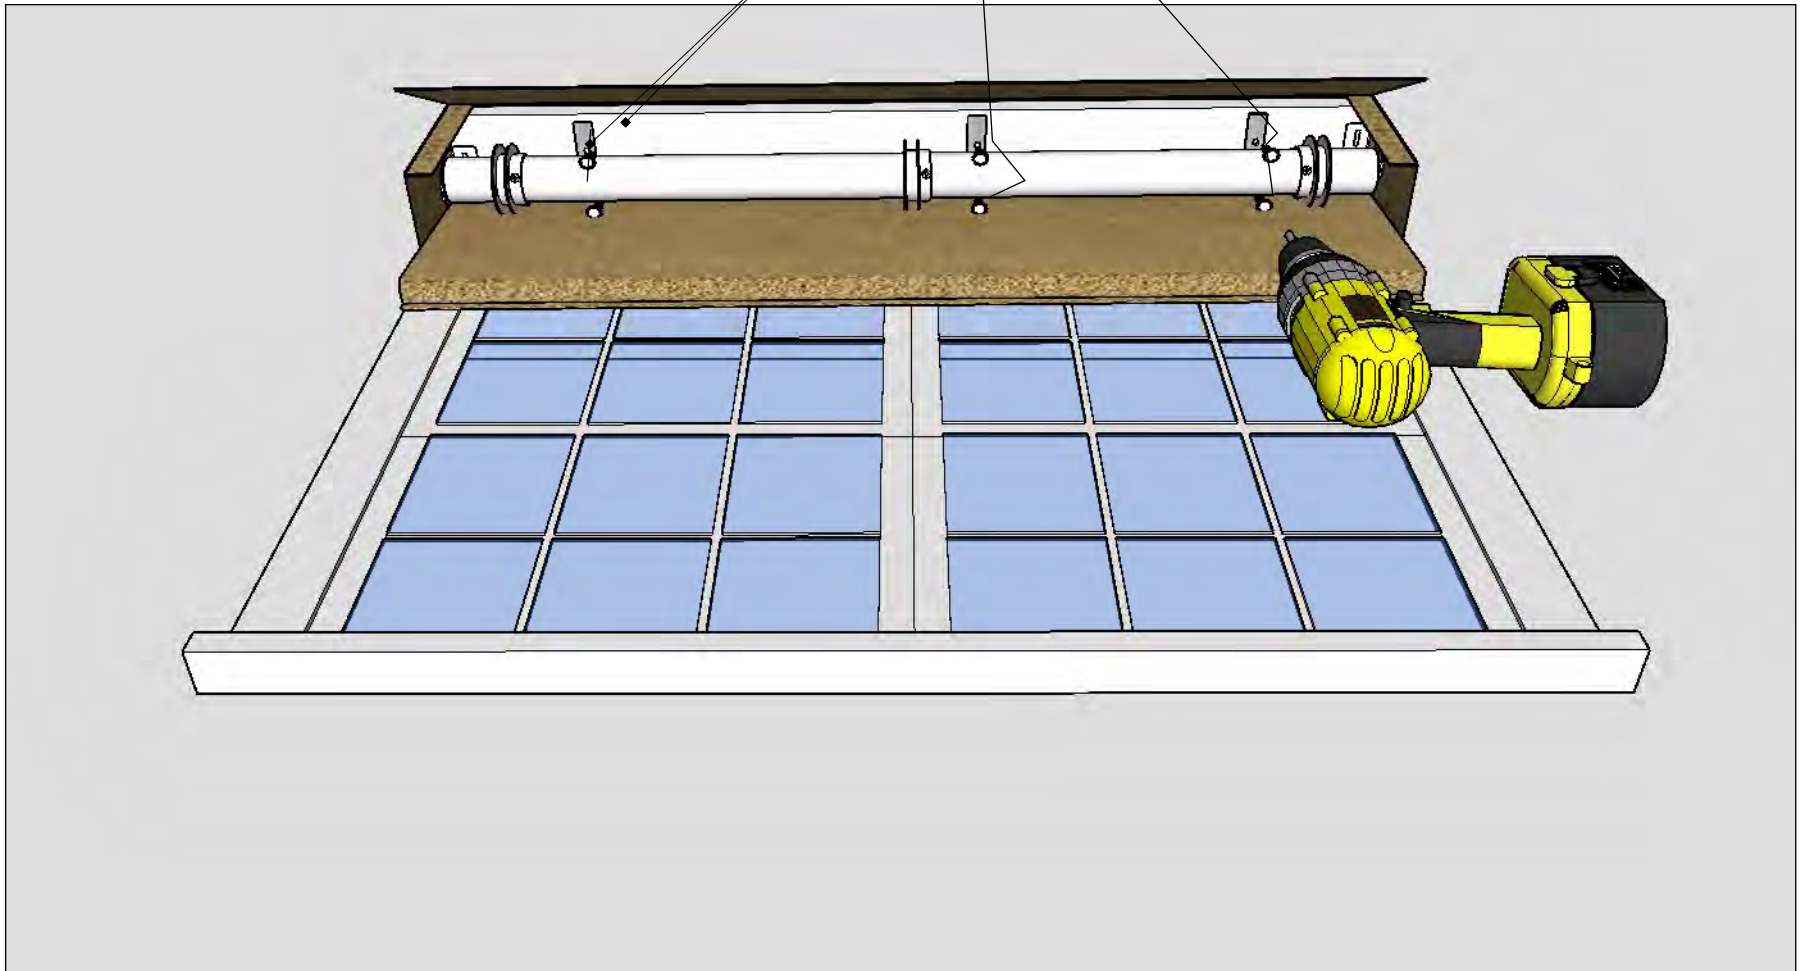


Fabric Back Shade

Inside Mount Roman Shade

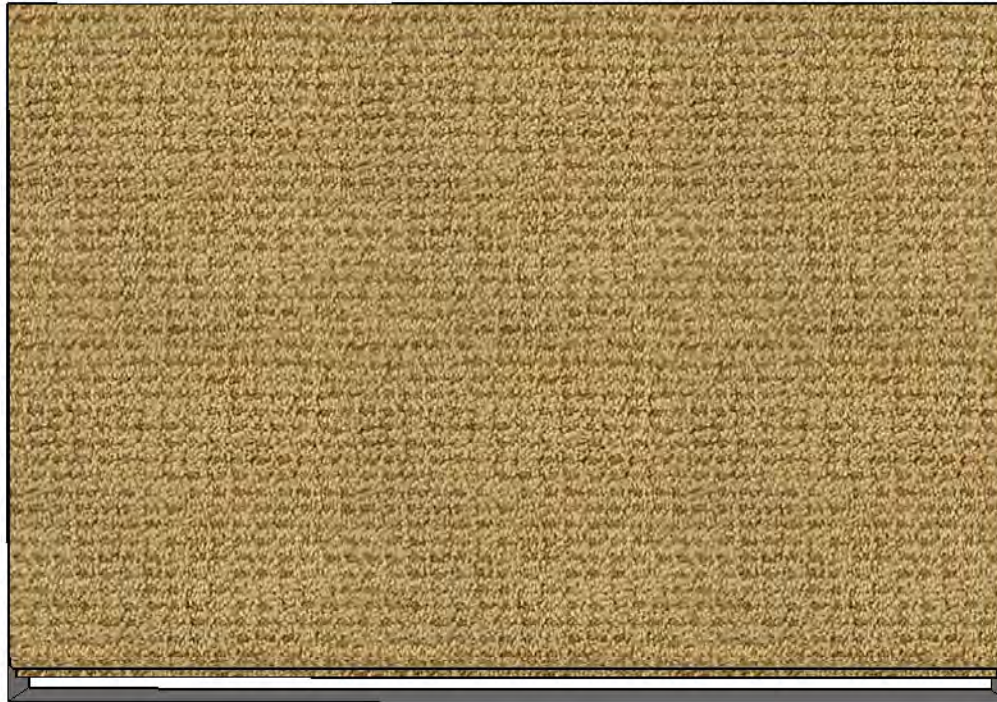

Install 2" screws placed at locations to clear the tape reels.
Install intermediate screws at approximately every 24".

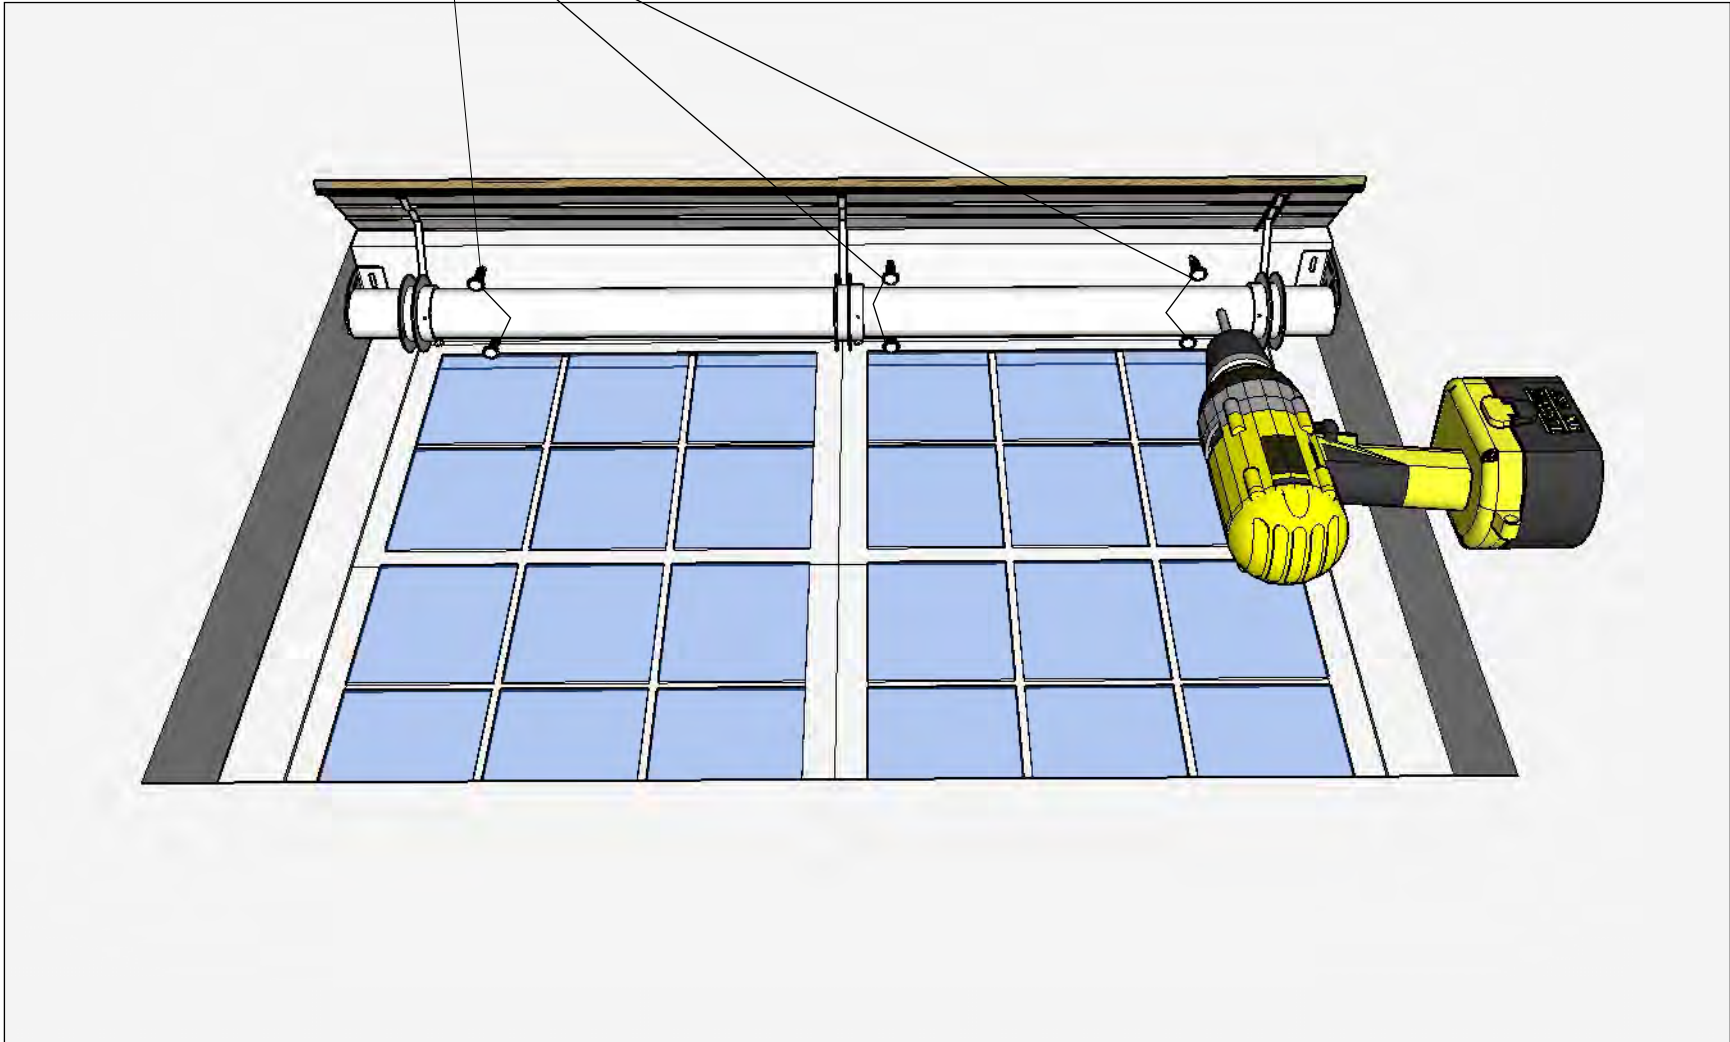

Fabric Front Shade and Fabric Back Shade

Programming Guides

Please scan the QR code or click the link below to be forwarded to the programming guides for instructions on how to set the upper and lower limits, assigning controls, etc.



Use the QR code above to access the instruction guide from a smart device.

[Click Here](#)

Use the link above to access the instruction guide from an electronic device.